


# Odyssey Mobile Sink

## USER MANUAL

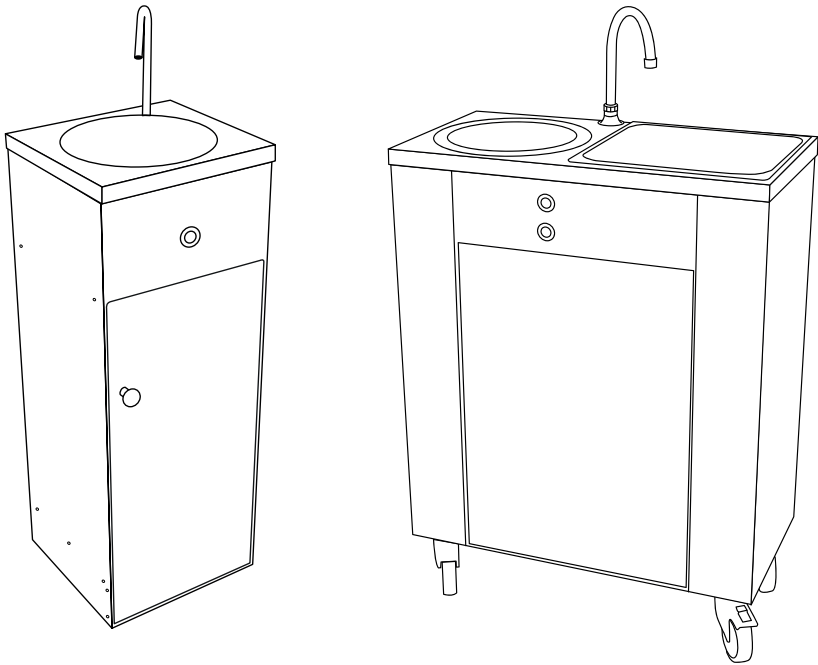

Operating instructions for a hot  
water electric and cold water  
manual odyssey mobile sink



## Instructions for a **Hot Water Electric** Odyssey Mobile Sink

1

Position near a  
**mains plug socket**



2

Fill your clean water  
container with **cold water**  
(do not use hot water)



3

Place your clear inlet pipe into  
the **clean water** container



4

Check the **waste water**  
container has the waste water  
pipe inside the container



5

Plug into the **mains socket**



6

Your Odyssey Mobile Sink  
Unit will now **test itself**



7

Your Sink is now **ready to use**



## Instructions for a **Cold Water Manual** Odyssey Mobile Sink

1

Fill your clean water  
container with **cold water**



2

Place your clear inlet pipe into  
the **clean water** container



3

Check the **waste water**  
container has the waste water  
pipe inside the container



4

**Pump the tap or foot**  
**pump** a few times and the  
water will begin to flow



5

Your Sink is now **ready to use**





Please use standard Cleaning and General Maintenance advice as described.

## Adjusting the Water Temperature

The temperature can be changed by turning the black temperature control knob. This can be found inside the door above the water containers. Allow 3 dispenses of 170ml of water before the new desired temperature is set. A 2KW or Junior Mobile Sink unit will reach a maximum temperature of 38c with a standard 3KW Mobile Sink unit reaching a maximum of 48c.

## Hot and Cold Option

A standard model will have a central black button that will dispense hot water. A hot and cold option will have both blue and red buttons. Blue is for cold water on demand and will flow continually while you press the button. Red is for hot water and it will be measured at either 170ml or 270ml as per your model.

## Spray Hose Option

Holding the trigger on the spray hose will produce a continual flow. The water will reach a maximum temperature of 38c. A full 10 litre water container will run for approx. 6 minutes before you will need to replenish the fresh water container and empty the waste water container. This will be indicated by a reduced flow in water. Release the trigger and replace water as needed.

## Footswitch Option

Position your foot switch on the floor on a stable even area. Pressing your foot on the foot switch will dispense 170ml or 270ml of hot water.

## Motion Sensor & Infrared Tap Option

Waving your hand over the sensor or under the infrared tap will dispense 170ml or 270ml of hot water.

## Cleaning and General Maintenance

### Water containers and pipes

Empty and rinse containers daily, sanitise containers and clean water pipe regularly. To sterilise add 2 sterilising tablets to a 10 litre water container. Leave for at least 15 minutes and operate the 170ml dispense at least 5 times. Dispose of the water in both the fresh and the waste water containers rinse and replace with clean potable water. Operating the 170ml dispense an additional 5 times.

### Outer Case

Clean regularly with an antibacterial spray

## Trouble shooting

- Is the clear inlet fresh water pipe in the fresh water container?
- Does your clean water container need replenishing?
- Does your waste water container need emptying?
- Does the fuse in your plug need replacing?

## IMPORTANT SAFETY INSTRUCTIONS - PLEASE READ CAREFULLY BEFORE USE

When using an electrical appliance, precautions should always be followed, including the following:

- 1 Do not leave plugged in when not in use.
- 2 Do not allow to be used as a toy. Close attention is necessary when used by children.
- 3 Check to ensure your electricity supply corresponds to the KW of your Odyssey Mobile Sink. This can be found on the serial number label.
- 4 Do not use with a damaged cord or plug.
- 5 Do not handle the plug with wet hands.
- 6 The use of an extension cord is not recommended.
- 7 Do not cross contaminate clean water containers by re-using the water in the waste container.
- 8 Hot water is not suitable for making beverages. However, all pipe work and water containers are food grade plastic.
- 9 Empty both the fresh and waste water containers daily and store in a frost free environment.
- 10 Always position on a flat and stable area, locking castors if applicable.
- 11 Do not wheel or push around or move without first emptying your water containers.
- 12 Store in an upright position.
- 13 Do not carry out any maintenance or repair work other than that advised by the Mobile Sink Company Ltd and only use recommended replacement parts.



If your Odyssey Mobile Sink is not functioning properly, has been dropped, damaged or left outdoors, contact the Mobile Sink Customer Service Team on **0330 088 3628**